

Assembly instructions



Grounding Kit GC / Item no.: 6818-6820

Required tools:

1 x 5 mm Hex Key


1 x Cutter knife

1 Connection instructions

Connect the grounding clamp to the equipotential bonding bar or the earth potential using the shortest possible cable.




Follow the screw connection according to the arrow mark.

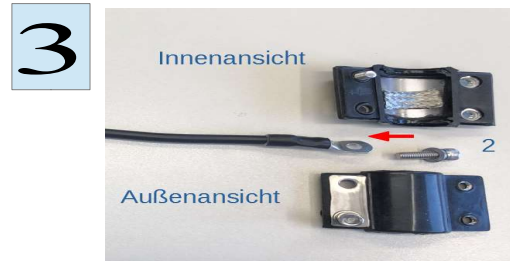


Mount the screw connection of the discharge cable on the outside of the clamp.



Carefully strip the coaxial cable 30 mm with a cutter knife.

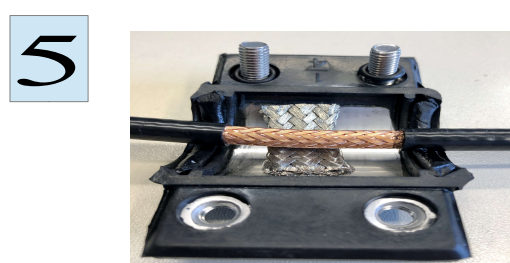

Insert the coaxial cable in the grounding clamp.

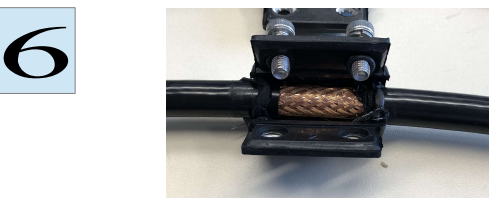

Close the grounding clamp.



Lock the screws with the 5 mm hex key.